

# Timer for 2/2-Way Direct Acting and Pilot Operated Solenoid Valves for Compressed Air Condensate Draining System.

**DATA SHEET Digital Timer** Model XY-3800H

### **SPECIFICATIONS**

Sizes : 10 mm to 25 mm

**End Connections** Standard-G-ISO-228 (BSP-F)/NPT Construction - Body Stainless Steel ASTM CF8 / CF8M.

> - Seat Std. Buna. Nitrile

Optional-Viton

Refer to Individual Catalogue. Differential Pressure: Coil Voltage Standard General Purpose SQ

Moulded Coil upto IP-20

Optional Weatherproof SQ moulded coil upto

IP-67.

Not available in Flame/Explosion

proof enclosure.

Fluids Condensate Water.

Temp. : Upto 80°C.

### **APPLICATION**

Solenoid Valves fitted with XY-3800 H Timer provides solution for automatic draining filter bowl separator, Driers, Receivers, Drip Legs and other Compressed air system, where collected condensate can be discharged.

#### DESCRIPTION OF TIMER

AVCON XY-3800 H Timer consists of solid state circuit, capable of mounting of the valve coils. Simply adjust discharge time and interval of discharge, to suit particular compressed air Vessel.

#### FUNCTION DESCRIPTION:

- High quality flame retardant plastic shell, high strength and 1. security.
- 2. Microcomputer chip control, powerful, high precision.
- 3. LED digital display with night vision function.
- Time adjustment: range: Two way adjustable time switch, ON time 1Sec ~99h59min59Sec; OFF time 1Sec ~99h59min59Sec. 4.
- 5. Function mode: Loop mode
  - (two ways: first On then Off or first Off then On);
- 6.
- Single mode (one way: specified time on).

  Supply: AC/DC 110~240 V (XY-3800H).

  Power supply: High voltage AC/DC 110~240 V (XY-3800H)
- Protection IP65 when properly installed.
  The standard DIN43650A input and output interfaces. 8.
- ON, OFF
- Field of use: Solenoid valve controlling and other similar purposes for 10.

### DISPLAY OPERATING MODE INSTRUCTION

- The display shows "-----" is stop setting mode.
- The display shows "--- XXX" is switch-on time setting mode (where 2. represents the number displayed);
- 3. The display shows "XXXX" is off time setting mode (where X represents the number displayed).
- 4. The display shows ON—OFF is first ON then OFF (Loop) mode.
- The display shows OFF—ON is first OFF then ON (loop) mode. 5
- The display shows ON when first opened, after a specified time (1sec to 99h59min59Sec) normally closed (single) mode

### **MODE AND TIME SETTINGS:**

First use the factory settings, turn on the power supply is in the 'ON-OFF' cycle mode working conditions. ON time is 2 seconds countdown (Display --- 00X "where X is the diminishing numbers) OFF time is 2 seconds countdown ("0 0 0 0.0 X"where X is the decreasing number), To modify the function mode and time, press MODE button which shows 'ON-OFF", then press the MODE button you can switch between OFF-ON", "ON" mode, select the mode of the function you want, then press ENTER button to make function mode setting effective, effective set automatically enter this mode for the time set. First enter the ON time parameter setting ("the---XXX"), when the digital is flashing, the




parameter setting can be set, press ADD button to increase the time, press ENTER to confirm; and then enter into the OFF time parameter setting (display "XXXXXX"), OFF time setting is the same as ON time set. After the setting, the display will flash four times of the function mode 'ON-OFF' then enter into stated working

condition. When the parameters is setting, the system will stop working; the new parameter setting will replace the old parameters and the system will continue to work again; after the new parameter setting is effective, during the setting parameters, If the Enter key haven't be pressed and exit the setting mode directly, the system will continue to work under the old parameters. (The above parameter setting takes the ON - OFF as the example, the other mode setting is the same as ON-OFF setting).


#### OTHER FUNCTION:

Reset function: Press the RESET Button when it is working, the system will stop the current work and start the cycle work from the beginning according to the parameters which has been set.

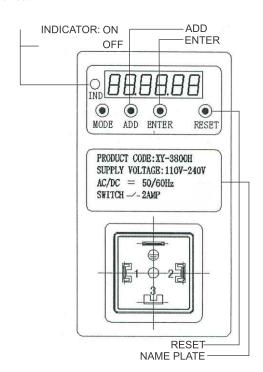




### WHERE TO INSTALL THE AVCON VALVE WITH TIMER MODEL - XY-3800 H

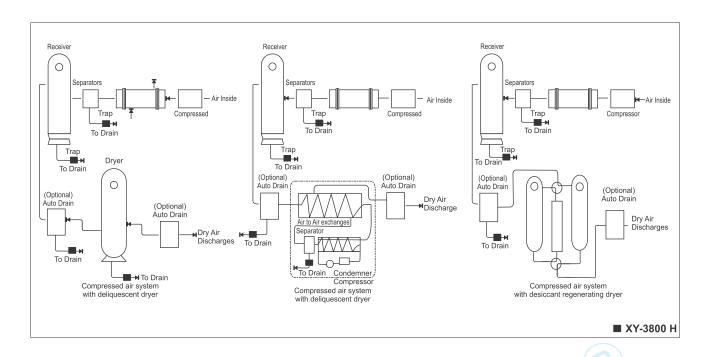

#### **Details of Auto Drain Valves:**

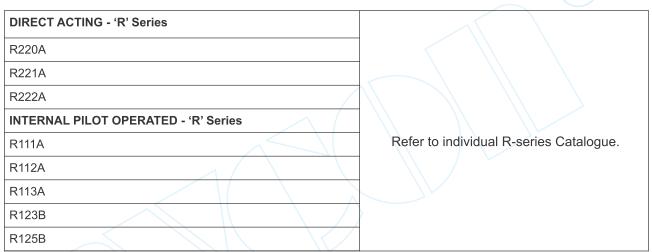

#### Note:

Technical specifications, details & dimensions are subject to change without prior notice. Dimensions in the table are approximate subject to final confirmation by AVCON.

Office At.: Contact No.: PUNE (BR) 08390902673 NEW DELHI (BR) 09810915079 KOLKATA (BR) 09831904444 CHENNAI (BR) 08939312809 BANGALORE (BR) 08431256574 HYDERABAD (BR) BARODA (BR) 07995086416 08511119967 MUMBAI (BR) 09810015079



## **AVCON CONTROLS PVT. LTD.**

**REGD OFFICE & WORKS:** 

Plot No.65, Road No.13, MIDC Marol Area, Andheri (E), Mumbai-400 093.

Tel. No.: 91(22)-69156100,28221505 Fax No.: 91(22)-28213298 E-mail: avcon@avconcontrols.com